



left: SWV below the rotator. right: SWV above the rotator

Accessories for Block Loading Grabs

Quick Change Device SWV

The Quick-Change-Device (SWV) simplifies the suspension of all types of grabs, including those already available, from one crane or from various cranes in a fleet.

When using the SWV quick coupling or screw coupling should be used for high-pressure hoses.

- An enormous amount of setting up time can be saved by using this device if the grab has to be taken down after each load.
- By using the SWV the driver can change over the attachment without additional help.

Туре	Description	Dead Weight kg (lbs)	Working Load Limit/WLL kg (lbs)	Order-Number
SWV below the rotator	The rotator remains on the cranes in normal circumstances. Always state the type of rotator and crane when upon inquiry	10 (22)	4,000 (8,818)	46200001
SWV above the rotator	Rotator remains on clamp. Always state the type of rotator and crane when upon inquiry	10 (22)	4,000 (8,818)	46200002

Suspension Link

Туре	Description	Dead Weight kg (lbs)	Working Load Limit/WLL kg (lbs)	Order-Number
Below the rotator	For adapting different types of rotary head to the tongs. Always state the type of rotator and crane when upon inquiry	4 (8.82)	4,000 (8,818)	46200072
Above the rotator	For adapting different types of rotator to the crane. Always state the type of rotator and crane when upon inquiry	4 (8.82)	4,000 (8,818)	46200073